

## Approved for all wood flooring designed for glue-down applications, rubber tile, rubber stair treads & nosings and recycled rubber

## TROWEL RECOMMENDATIONS AND SPREAD RATES

For 5/16" Solid, Engineered Plank less than 3/8" and most rubber flooring use 1/8" x 1/8" x 1/8" square notch trowel Spread rate: 55-65 sq ft/gal	1/8" 1/8" 1/8" x 1/8" x 1/8" SQ
For Engineered Plank 3/8" to 9/16" thick and less than 5" wide and 1/2" solids use 3/16" x 3/16" x 3/16" square notch trowel Spread rate: 35-40 sq ft/gal	3/16" 3/16" x 3/16" x 3/16" SQ
For Engineered Plank 5" or wider and 3/4" solids use 1/4" x 1/4" square notch trowel Spread rate: 25-40 sq ft/gal	1/4" 1/4" 1/4" 1/4" 1/4" SQ
For Parquet Wood Tile use 3/32" x 3/32" square notch trowel Spread rate: 70-80 sq ft/gal DO NOT USE WITH PARQUET FOAM-TILE	3/32" 3/32" 3/3 <u>2"</u> 3/32" x 3/32" x 3/32" SQ
For Recycled Rubber Flooring use 1/8" x 1/8" x 1/8" square notch trowel Spread rate: 55-65 sq ft/gal	1/8" 1/8" 1/8" SQ
For Rubber Sheet Flooring or Tiles use 1/16" x1/16" x 1/16" square notch trowel Spread rate: 100-125 sq ft/gal	1/16" 1/16" 1/16"— 1/16" x 1/16" x 1/16" SQ

